

Label Loading and Ink Roller Changing Guide - Model 106 Hand Labeler



1 Open label loading gate




2 Insert roll on label roll holder



3 Close label loading gate



4 Open bottom cover

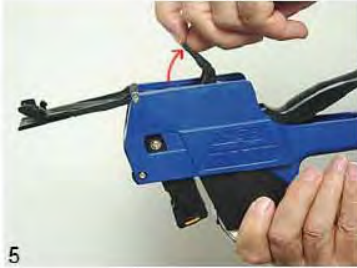

5 Lift to open platen



6 Straighten label roll for ease of loading



7 Feed the label strip through the body



9 To close, press the platen; while pressing, pull label strip until it "clicks" & does not advance



10 Squeeze handle couple of times while keeping platen pressed down & then fold back the label strip towards handle



11 Close the bottom cover

Loading labels



A Squeeze the handle



B Gently pull the ink roller holder



C Slide the ink roller from the holder



D Slide new ink roller onto the holder & release ink roller holder

Changing ink roller



Avery Dennison Printer Systems Division
 170 Monarch Lane Miamisburg, OH 45342
 1.1-877-926-8876 Monday-Friday, 8 AM-6:30 PM ET
www.monarch.averydennison.com

©2008 Avery Dennison. All rights reserved. Printed in U.S.A.